

SWA PAS snapshot config
File: IA-FCP-131_in.xls
Author: n/a



Procedure Summary

Objectives

SWA PAS snapshot config

Summary of Constraints

n/a

Spacecraft Configuration

Start of Procedure

Type Pre-condition Here

End of Procedure

Type Post-condition Here

Reference File(s)

Input Command Sequences

Output Command Sequences

AIAF131A

Referenced Displays

ANDs GRDs SLDs


Configuration Control Information

DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
------	-----------	---------	--------------------------	--------	---------

SWA PAS snapshot config
File: IA-FCP-131_in.xls
Author: n/a



Procedure Flowchart Overview

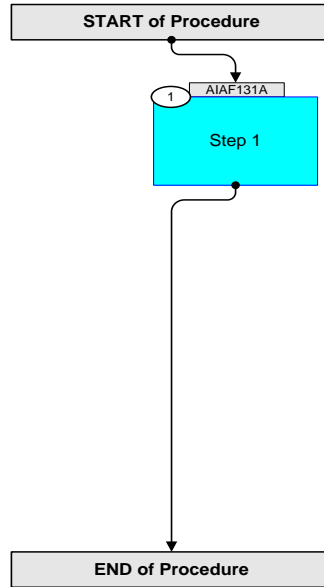

SWA PAS snapshot config File: IA-FCP-131_in.xls Author: n/a	 
---	--

Step	Label/Time	Activity/Remarks/Branch	CK	Display
Beginning of Procedure				
Beginning of Sequence				
AIAF131A		SWA PAS snapshot cnf SeqFlags [Crit/Plan/Stdalone/Sched] : NSYN Forced Subschedule : SWA (109) TimeTag type : B <u>Formal Parameter List</u> {FP} XF131A01 DefVal = 0 (PAR_DESC) <hex> {FP} XF131A02 DefVal = 4 (PAR_DESC) <hex> {FP} XF131A03 DefVal = 5A (PAR_DESC) <hex> {FP} XF131A04 DefVal = 0 (PAR_DESC) <hex> {FP} XF131A05 DefVal = 9 (PAR_DESC) <hex> {FP} XF131A06 DefVal = 20 (PAR_DESC) <hex> {FP} XF131A07 DefVal = 5 (PAR_DESC) <hex> {FP} XF131A08 DefVal = 4 (PAR_DESC) <hex>		
1		Step 1		
		Modify Configuration Parameter 0x3008		
	+00.00.00	Send SWA_TC_DPU_MODIFY_CONF_PARS ZIA58706 SWA_TC_DPU_MODIFY_CONF_PARS TC Control Flags: GBM IL DSE --Y NC --- Command Parameters : PIA60133 NUM_OF_PARS = 0001 <dec> (Def) PIA60136 PAR_ID = 3008 <hex> PIA60135 PAR_DESC_SIZE = 30 <dec> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A01 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A02		
		PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A03 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A04 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A05 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A06 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A07		

SWA PAS snapshot config File: IA-FCP-131_in.xls Author: n/a	 
---	--

Step	Label/Time	Activity/Remarks/Branch	CK	Display
		PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = XF131A08 PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 7 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 0 <hex> PIA60134 PAR_DESC = 1 <hex>		
		Accept Configuration Parameter change		
	+00.00.02	Send SWA_TC_DPU_ACCEPT_CONF_PARS ZIA58708 SWA_TC_DPU_ACCEPT_CONF_PARS TC Control Flags: GBM IL DSE --Y NC ---		
		Report Configuration Parameter change		
	+00.00.01	Send SWA_TC_DPU_REPORT_CONF_PARS ZIA58707 SWA_TC_DPU_REPORT_CONF_PARS TC Control Flags: GBM IL DSE --Y NC --- Command Parameters : PIA60137 NUM_OF_PARAMS = 0001 <dec> (Def) PIA60138 PAR_ID = 3008 <hex>		
AIAF131A		End of Sequence		
End of Procedure				